


# OPTIONAL CONTROL WIRING DIAGRAM

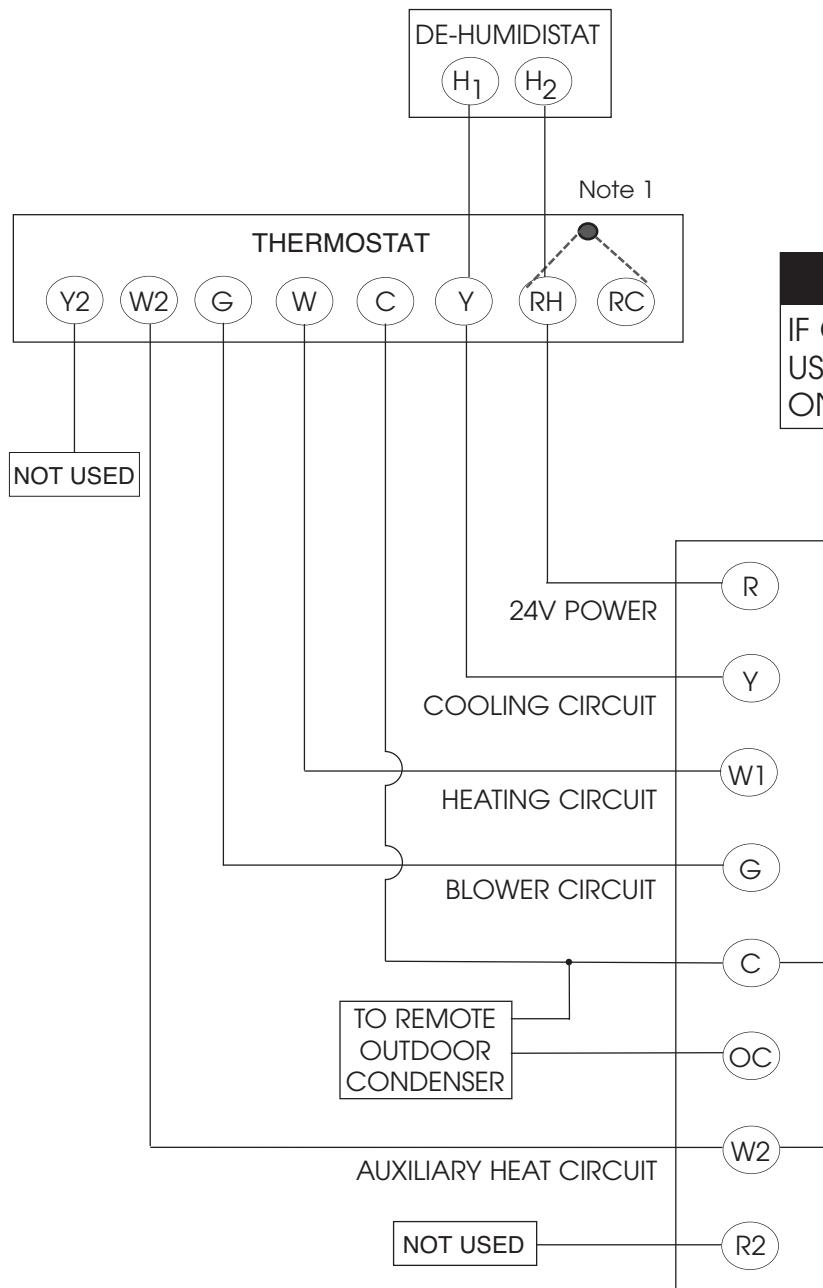

DH-46 DE-HUMIDISTAT  
ME-52 MICRO ELECTRONIC  
AUTO/MULTI-STAGE THERMOSTAT

## IMPORTANT

IF OUTDOOR CONDENSER IS INSTALLED  
USE JUMPER WIRE BETWEEN R<sub>H</sub> & R<sub>C</sub>  
ON THERMOSTAT.

For Models:

DRY-10A / OC-10A  
DRY-20A / OC-20A  
DRY-25A / OC-25A  
DRY-30A / OC-30A  
DRY-30A / OC-35A  
DRY-40A / OC-40A  
DRY-40A / OC-45A  
DRY-50A / OC-50A

TO SECOND STAGE HEATING  
SOURCE (DUCT HEATER, HOT  
WATER COIL, DUCT FURNACE.)

## IMPORTANT

Directions for Correct T-stat  
Installer Set-Up Option.

Function	Set
1 >>>>>	7
3 >>>>>	1
5 >>>>>	2
6 >>>>>	9
9 >>>>>	2
12 >>>>>	1
14 >>>>>	0
15 >>>>>	0
27 >>>>>	87
28 >>>>>	75

Note #1 IF OUTDOOR CONDENSER IS INSTALLED  
USE JUMPER WIRE BETWEEN R<sub>H</sub> & R<sub>C</sub>

Added R2 Terminal	01/21/97	JMF
Revisions	Date	By
DryAire Systems		
Drn: MSU	Ck'd: MSU	Ap'vd: DWS
Date: 09/12/90	Scale: Full	
24 VAC Control Wiring		